

FILTERS, FILTER CLEANING & MORE

Provent Kit for Mitsubishi Pajero (from late 2016) NX 3.2L Turbo Diesel 4Cyl. DOHC

KIT No: OS-PROV-27



Fitting Instructions for Provent 200 Kit

- STEP 1:** Ensure Engine is OFF and cool enough to work on.
- STEP 2:** Remove Plastic Engine Cover by pulling up (img.1).
- STEP 3:** Loosen OEM bolt, slide Provent bracket behind plate, placing over protruding bolt, add supplied nut then tighten both nuts (img.2)
- STEP 4:** Before attaching Provent to bracket, ensure position is correct (img.3)
Fit Clear Drain Hose to the Lower Outlet of the Provent 200 unit and then secure with hose clamp (img.3)
- STEP 5:** Fit Provent to Bracket, with supplied bolts, nuts & washers (img.4)




Step 2 / Img 1:



Step 3 / Img 2:



Step 4 / Img 3:

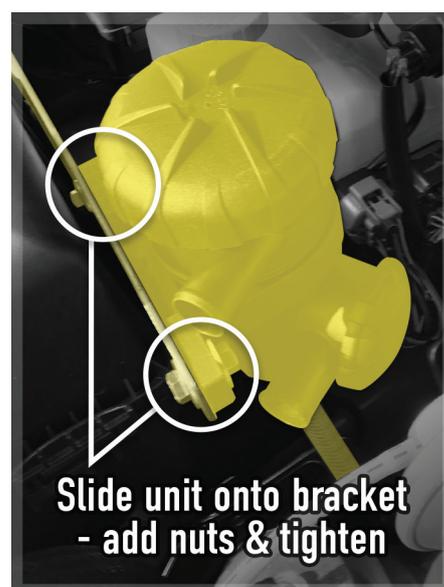

Step 5 / Img 4:

FILTERS, FILTER CLEANING & MORE

Provent Kit for Mitsubishi Pajero (from late 2016) NX 3.2L Turbo Diesel 4Cyl. DOHC

KIT No: OS-PROV-27


- STEP 7:** Remove existing OEM hose from engine (img.5).
- STEP 8:** Attach Provent's Lower Hose (LH) to the OEM hose (air intake) removed from the crank case. Secure with supplied hose clamps (img.6).
- STEP 9:** Attach the Provent's Upper Hose (UP) to the crank case inlet (img.7). Secure with supplied hose clamps.
- STEP 10:** Cable tie hoses to avoid rubbing where necessary.
- STEP 11:** Replace the plastic engine cover. Job done !



Step 7 / Img 5:



Step 8 / Img 6:

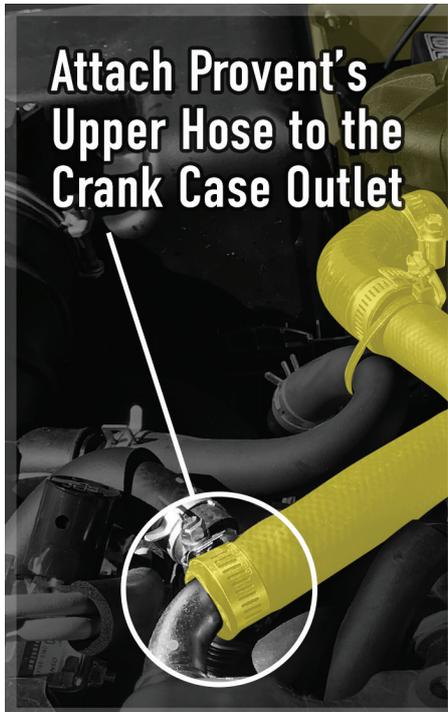

Step 9 / Img 7:



Step 10 / Img 8: