

FILTERS, FILTER CLEANING & MORE

Provent Kit for Toyota Landcruiser 70 Series (2007-on) 4.5L V8 TD VDJ76/78/79 IVD-FTV

KIT No: OS-PROV-30



Fitting Instructions for Provent 200 Kit

STEP 1: Ensure Engine is OFF and cool enough to work on.


STEP 2: Identify OEM Hose (between Air Intake & Crank Case Outlet (img.1).

STEP 3: Identify install area (below power steering - driver's right side) (img.2).

STEP 4: Before attaching Provent to bracket:


- Fit Drain Hose to the base of the Provent Unit
- Feed Drain Hose down through the engine bay, inside wheel arch
- Secure with hose clamp & cable ties (img.3)

STEP 5: Fit Provent to Bracket, bolt in supplied Strut, secure all (img.4).

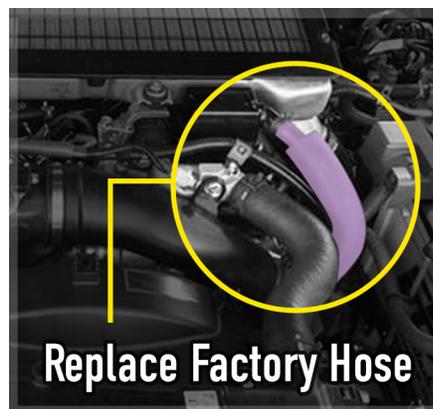

Replace Factory Hose


Step 2 / Img 1:

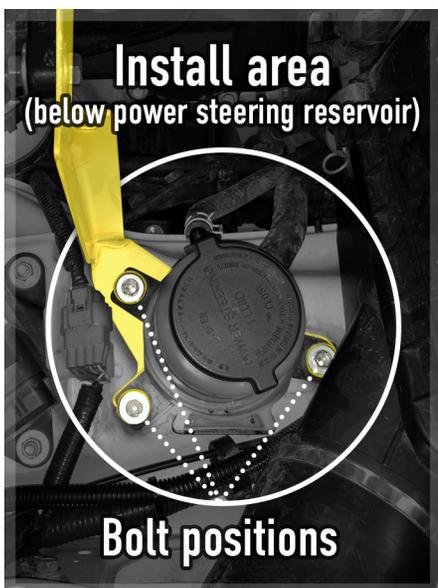

Install area
(below power steering reservoir)


Bolt positions

Step 3 / Img 2:

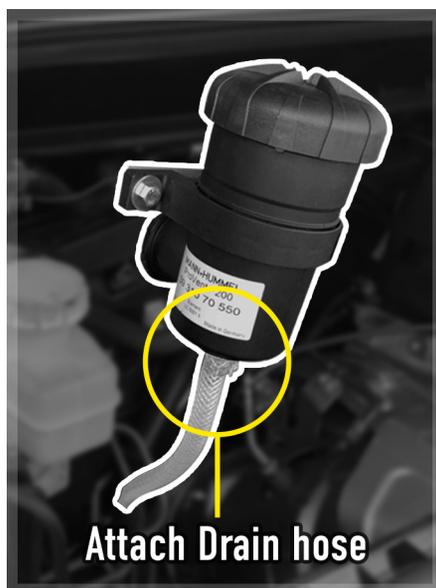

Attach Drain hose

Step 4 / Img 3:

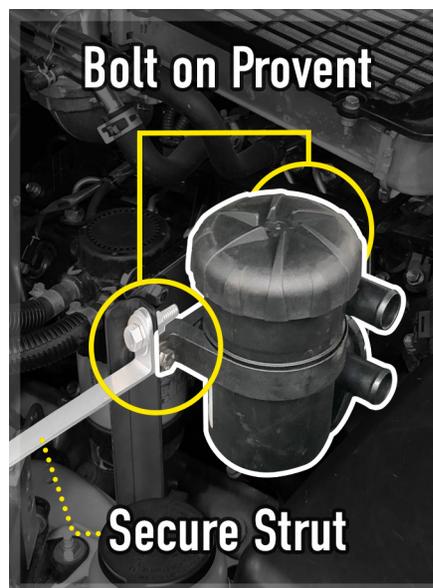

Bolt on Provent

Secure Strut

Step 5 / Img 4:

FILTERS, FILTER CLEANING & MORE


Provent Kit for Toyota Landcruiser 70 Series (2007-on) 4.5L V8 TD VDJ76/78/79 IVD-FTV

KIT No: OS-PROV-30

- STEP 7:** Attach the supplied longer 'Lower Hose' (in blue) to the Air Intake and run back to the Provent Lower Outlet (see Imgs.5 & 6 and/or Prov-30 Video).
- STEP 8:** Release the nut holding the OEM hose clamp to place the Lower Hose below, then re-attached (see Img.7).
- STEP 9:** Attach other supplied 'Upper Hose' (in gold) to the Crank Case Outlet and run back to the Provent Upper Inlet, placing the hose along the Lower Hose (see Imgs. 7 & 8).
- STEP 10:** Cable tie hoses to avoid rubbing where necessary. Dust off. Job done !




Step 7 / Img. 5:

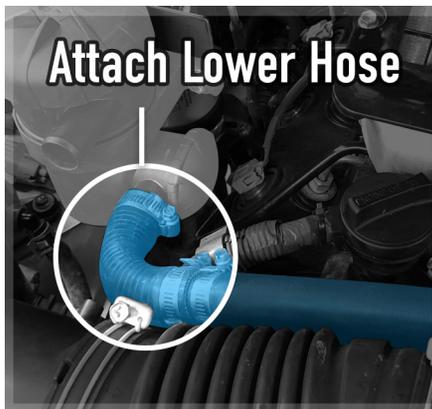


Step 8 / Img. 6:



Step 8 / Img. 7:

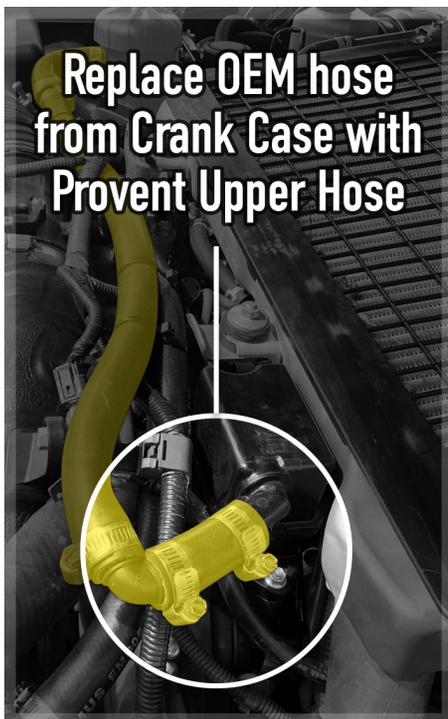

Step 9 / Img 7:

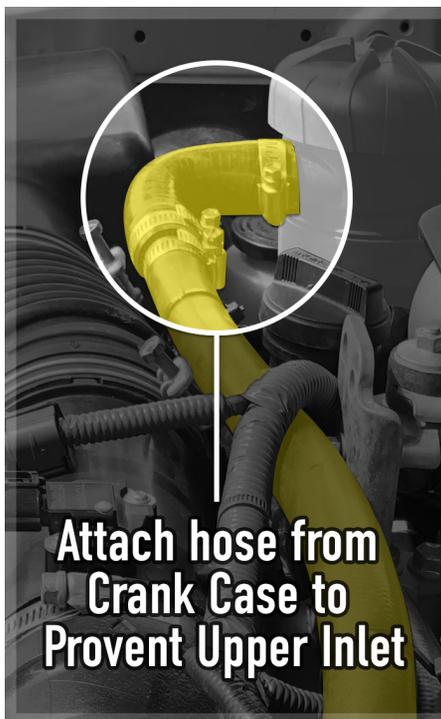

Step 9 / Img 8:



Step 10 / Img 10: