

FILTERS, FILTER CLEANING & MORE

Provent Catch Can Kit for NISSAN Navara D40 (2012 on)

KIT No: OS-PROV-33




Fitting Instructions for Mann Provent 200 Kit


- STEP I: Ensure Engine is OFF and cool enough to work on.
- STEP 2: Identify Install Area passenger side of engine bay (img.1).
- STEP 3: Unclip the ECU Unit from the OEM Bracket, remove Bracket (img.2).
- STEP 4: Bolt in Provent Bracket, clip on ECU Unit (img.3).
- STEP 5: Swivel Provent in to position within it's plastic holder (img.4) Fit Clear Drain Hose to the Base of the Provent 200 unit and then secure with hose clamp (img.4). Feed Hose down between engine bay
 - Ensure TAP IS OFF.




Step 2 / Img I:

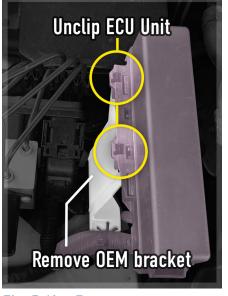

Step 3 / Img 2:

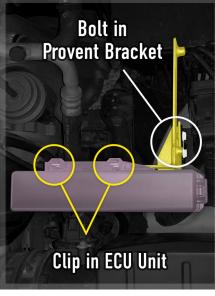

Step 4 / Img 3:

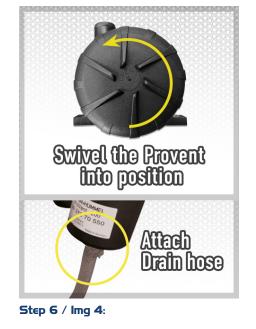

Hansen Automotive Centre Unit 1 - 10 Halifax Dr, Davenport WA 6230 | Mon - Fri: 7.45am - 5.30pm

www.HansenAutomotiveCentre.com | 08 9725 6852 | hansenautomotivecentre@gmail.com



FILTERS, FILTER CLEANING & MORE

Provent Catch Can Kit for NISSAN Navara D40 (2012 on)

KIT No: OS-PROV-33


- STEP 7: Remove OEM Breather Hose from Crank Case Outlet & Air Intake (imgs. 5&6).
- **STEP 8**: Fit the Short Hose from Provent's Lower Outlet to the Air Inlet secure with provided hose clamps (img7).
- STEP 9: Fit the Longer Hose from Provent's Top Inlet to the Crank Case Outlet - secure with provided hose clamps (img8).
- **STEP IO: Use Cable Ties** if required.
- STEP II: You're Done !
- **NOTE:** Once installed, the lid of the Provent unit can be easily removed for observation purposes.



Step 7 / Img 5:



Step 8 / Img 6:

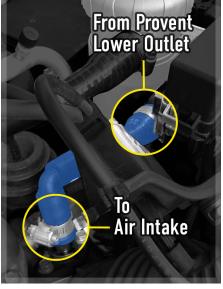

Step 9 / Img 7:



Step IO / Img 8:

Hansen Automotive Centre Unit 1 - 10 Halifax Dr, Davenport WA 6230 | Mon - Fri: 7.45am - 5.30pm

www.HansenAutomotiveCentre.com | 08 9725 6852 | hansenautomotivecentre@gmail.com