

FILTERS, FILTER CLEANING & MORE


Provent Catch Can Kit for LDV T60 (2017-on) 2.8L Turbo Diesel 4Cyl. I6V VGT + Intercooler

KIT No: OS-PROV-3I




Fitting Instructions for Mann Provent 200 Kit

- STEP 1:** Ensure Engine is OFF and cool enough to work on.
- STEP 2:** Remove Plastic Engine Cover by pulling up (img.1).
- STEP 3:** Use OEM Bolt to secure Bracket - Place bracket base under fitting, slip washer on to bolt, screw in (img.2).
- STEP 4:** Swivel Provent in to position within it's plastic holder (img.3)
Fit Clear Drain Hose to the Base of the Provent 200 unit
and then secure with hose clamp (img.3).
Feed Hose down between engine bay - Ensure TAP IS OFF.
- STEP 5:** Bolt Provent on to Bracket Place Provent in to position then bolt on to bracket (img.4).

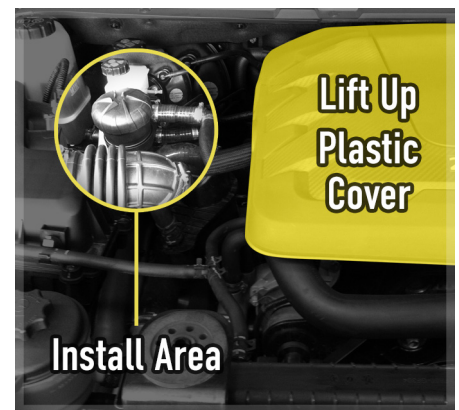


Step 2 / Img 1:

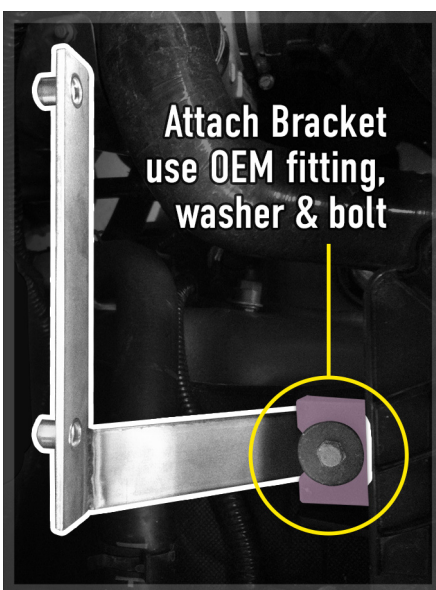

Step 3 / Img 2:



Step 4 / Img 3:

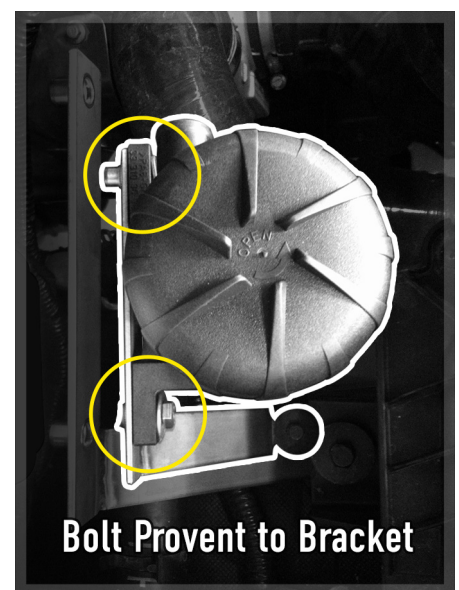

Step 6 / Img 4:

FILTERS, FILTER CLEANING & MORE

Provent Catch Can Kit for LDV T60 (2017-on) 2.8L Turbo Diesel 4Cyl. I6V VGT + Intercooler

KIT No: OS-PROV-3I

STEP 7: Remove OEM Breather Hose between Crank Case & Air Intake (img5).


STEP 8: Fit the Short Hose from Provent's Lower Outlet to the Air Inlet - secure with provided hose clamps (img6).

STEP 9: Fit the Longer Hose from Provent's Top Inlet to the Crank Case Outlet - secure with provided hose clamps (img7).


STEP 10: Use Cable Ties if required.

STEP 11: Return engine cover


NOTE: Once installed, the lid of the Provent unit can be easily removed for observation purposes.

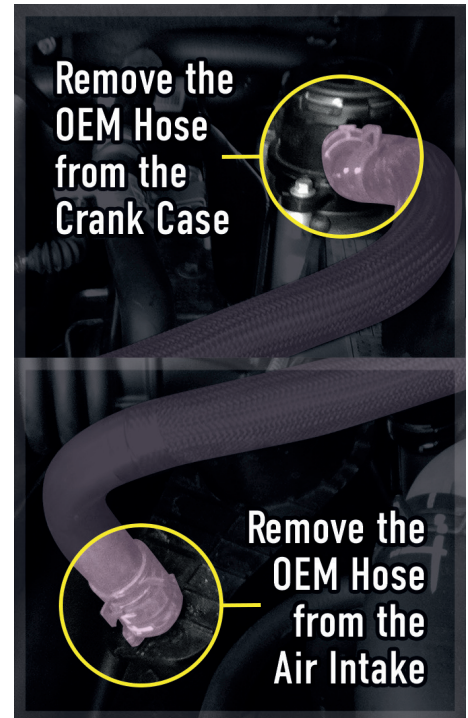


Step 7 / Img 5:

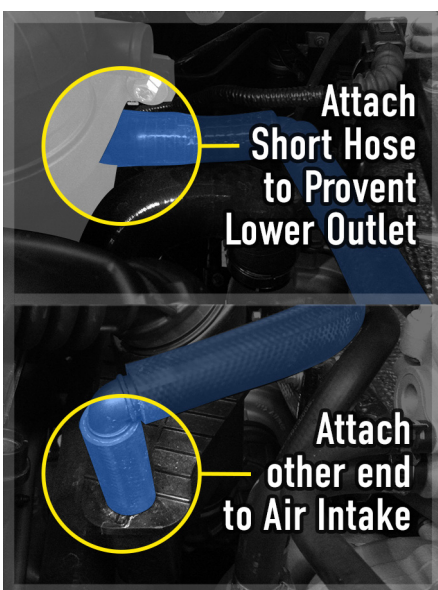

Step 8 / Img 6:

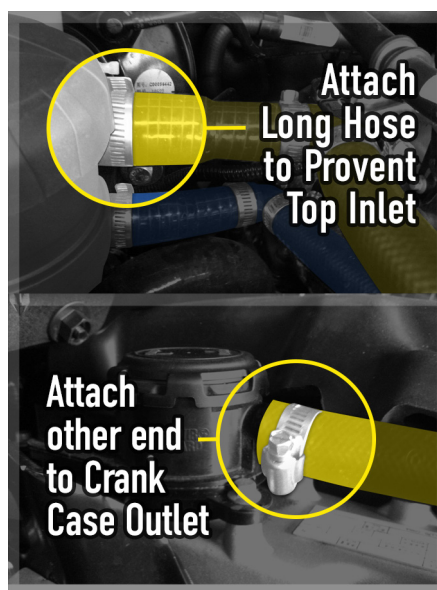

Step 9 / Img 7:

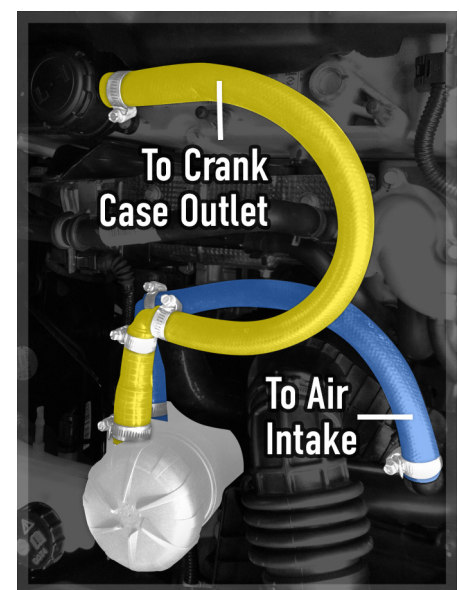

Step 10 / Img 8: