08 9725 6852

Hansen
Automotive
Affordable Rates • Quality Work • Reliable

HansenAutomotiveCentre@gmail.com

www.HansenAutomotiveCentre.com



Use this guide to assist in the installation of the Fuel Manager Pre-Filter Kit. This kit will only it the stated vehicle. Although these kits are aimed at DIY enthusiasts, we suggest the inexperienced organise a mechanic to carry out the installation.

before starting : please read this important information

- · Ensure the engine bay is clean and free from contaminants.
- The Fuel Manager unit has arrows which indicate low located under the ports.
- Install all ittings & plugs into the ilter assembly using a suitable thread paste such as Permalock Thread Sealant.
- ** Kit contents may change due to reinement or parts availability.

Fitting Instructions:


- Remove the 6mm nut from rear corner of the battery tray holding a bracket, also remove the 6mm bolt from the rear of the fuse box. Slide the bracket under the fuse box and over the stud on the battery tray. With supplied 6mm lange bolts secure the base of the bracket and reit the 6mm nut to the battery tray.
- 2. Mount the Fuel Manager ilter to the bracket.
- Install the elbow adaptors into the Fuel Manager ilter head using thread paste sealant. These ittings will go on the side of the ilter head closest to the mudguard. Install the 12mm ittings into the elbows
- 4. Lift the factory fuel ilter out of its holding cradle. The hose closest to the mud guard on the factory ilter is the inlet hose, this hose can be traced down to the irewall. This hose needs to be completely removed.
- 5. With the 12mm hose supplied place 1 piece onto the steel pipe on the irewall (this pipe comes from the tank). Using clamp supplied secure hose. Cut to size and join the other end of this hose onto the inlet of the Fuel Manager ilter.
- 6. Then place one end of the remaining fuel hose onto the inlet of the factory ilter. Using supplied clamp secure hose. Reit the ilter into it mounting bracket. Run the other end of the hose onto the out let of the Fuel Manager.
- 7. Bleed the fuel system by pumping the hand primer on the factory ilter until it goes irm and start vehicle.









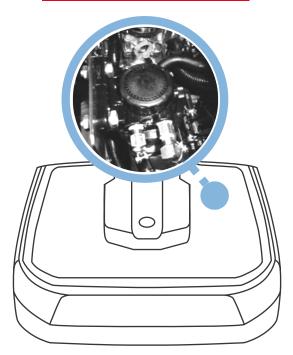

FM601DPK Kit Contains:

- 1x Fuel Manager 100 30 Micron Filter Assy
- 1x Vehicle Speciic Bracket
- 1x Spare 30 Micron Filter
- 2x NPT Straight 1/4" (12mm)
- 1x NPT Plug 1/4"
- 1x Push on 90° (12mm)
- 2x 12mm Fuel Line Rubber
- 2x Bolts & Nuts, 4x Washers
- 3x Zinc Bolts (6x25mm)
- 1x Washer 6mm
- 1x Hose Clamp