

08 9725 6852

Hansen Automotive

Affordable Rates • Quality Work • Reliable HansenAutomotiveCentre@gmail.com
www.HansenAutomotiveCentre.com

MANN+HUMMEL


Provent Oil Catch Can Kit for 2015-on MANUAL Mitsubishi Triton MQ MR 2.4L TD 6Cyl. 4N15

KIT No: OS-PROV-I4



Fitting Instructions for Mann Provent 200 Catch Can Kit


- STEP 1:** With engine OFF & Cool to touch, remove engine cover.
- STEP 2:** The Install Area below brake fluid reservoir (drivers side).
 - mount left leg of bracket to OEM Stud - bracket bolts facing front (using supplied 6mm nut & washer)
 - right leg of bracket fits to the OEM Bolt on Firewall
- STEP 3:** Inlet Position: Rotate Provent within plastic bracket / 6 clicks.
 - attach Drain Hose to the base of the Provent.
- STEP 4:** Bolt Provent Unit to supplied Bracket
 - use the supplied nuts, washers and bolts from the Kit.

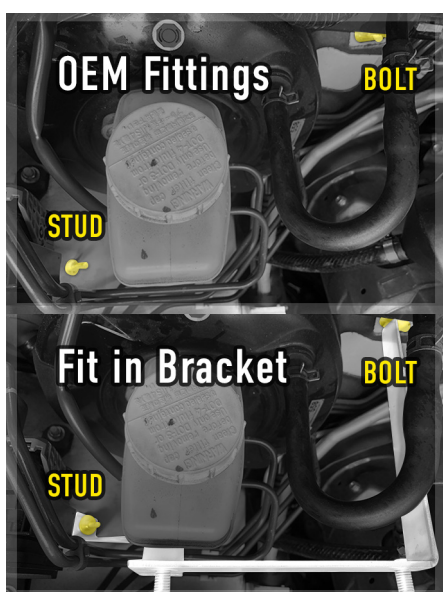

STEP 2:



STEP 3:

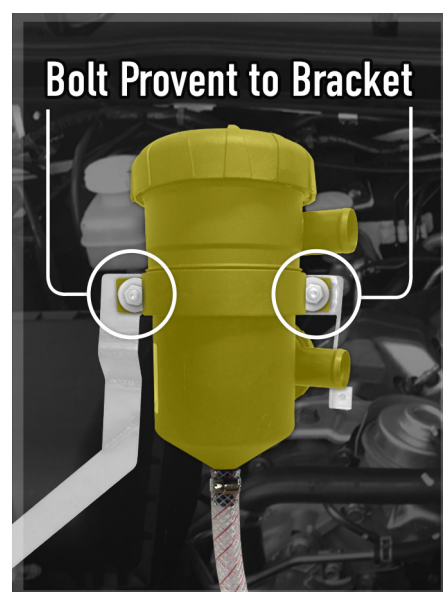


STEP 4:

Provent Oil Catch Can Kit for 2015-on MANUAL Mitsubishi Triton MQ MR 2.4L TD 6Cyl. 4N15
KIT No: OS-PROV-I4

- STEP 5:** Feed Drain Hose down through engine bay and wheel arch.
 - trim drain hose to the required length
 - secure with supplied clamp - ensure Tap Is CLOSED !
- STEP 6:** Remove the OEM Breather Hose from between the Crank Case and Air Intake (drivers side).
- STEP 7:** Attach supplied S-shaped Hose to Provent's Lower Outlet.
 Run along air box and fit to Air Intake just before the turbo. Clamp hose ends.
- STEP 8:** Attach Straight Hose to Provent's Top Inlet, bending the hose, connect to the Crank Case Outlet. Clamp
- STEP 9:** Manipulate the hoses so there are no kinks and clamp with supplied hose clamps (trim hose if required).
 Double check all clamps and nuts have been tightened, use supplied cable ties to support any hose you think necessary. Hose can be trimmed to suit.
- STEP 10:** Re-install the engine cover and job done. Congratulations - you're done !



STEP 5:

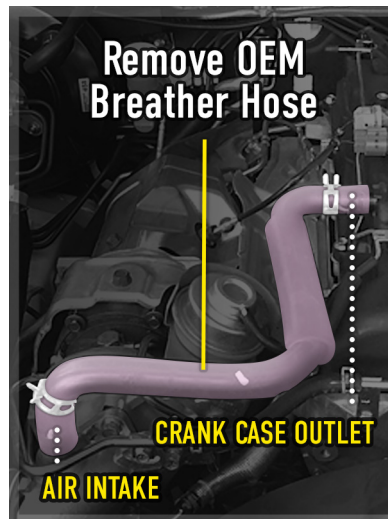


STEP 6:



STEP 7:



STEP 8:

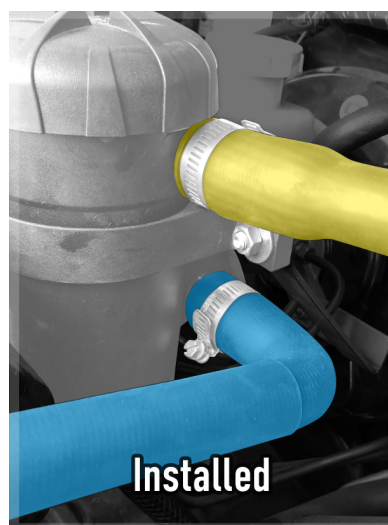

STEP 9:



STEP 10: