

FILTERS, FILTER CLEANING & MORE


Provent Kit for VOLKSWAGEN AMAROK (2010-on) 2.0L Turbo Diesel BiTDI B32KW/180HP

KIT No: OS-PROV-28




Fitting Instructions for Provent 200 Kit


- STEP 1:** Ensure Engine is OFF and cool enough to work on.
- STEP 2:** Identify OEM Hose (between Air Intake & Crank Case Outlet (img.1)).
- STEP 3:** Identify install area (right side of engine bay) (img.2).
- STEP 4:** Remove OEM nut then slide bracket over OEM bolt into place. Secure with OEM nut and supplied bolt. (img.3).
- STEP 5:** Before attaching Provent to bracket, **Rotate in to correct position.**
- Fit Drain Hose to the base of the Provent Unit
 - Feed Drain Hose down through the engine bay
 - Secure with hose clamp (img.4)

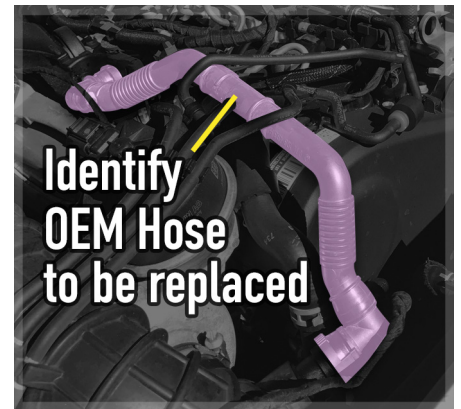

Step 2 / Img 1:

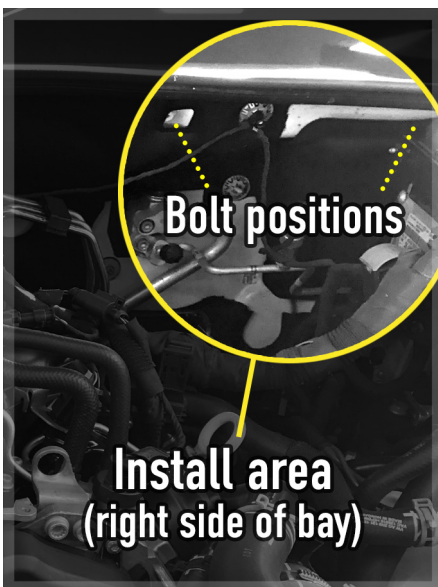

Step 3 / Img 2:

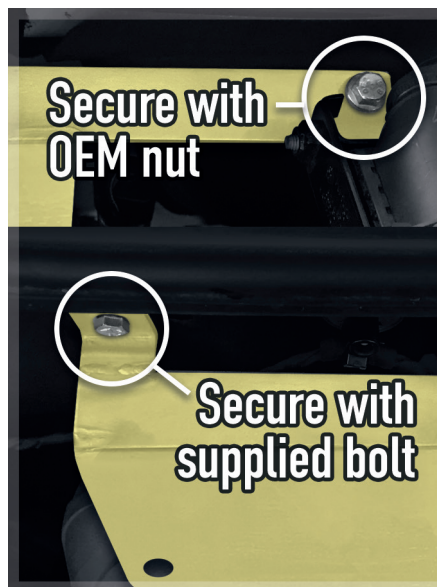

Step 4 / Img 3:



Step 5 / Img 4:

FILTERS, FILTER CLEANING & MORE

Provent Kit for VOLKSWAGEN AMAROK (2010-on) 2.0L Turbo Diesel BiTDI B32KW/180HP

KIT No: OS-PROV-28

STEP 6: Fit Provent to Bracket, with supplied bolts, nuts & washers (img.5)


STEP 7: Attach hoses to Provent (img.6).

STEP 8: Replace the OEM hose with Provent's Lower Hose (in blue)
Fitting to the Air Intake - secure with supplied hose clamps (img.7).


STEP 9: Replace the OEM hose with Provent's Upper Hose (in gold)
Fitting to the Crank Case inlet
- secure with supplied hose clamps (img.8).

STEP 10: Cable tie hoses to avoid rubbing where necessary.

STEP 11: Dust off. Job done !

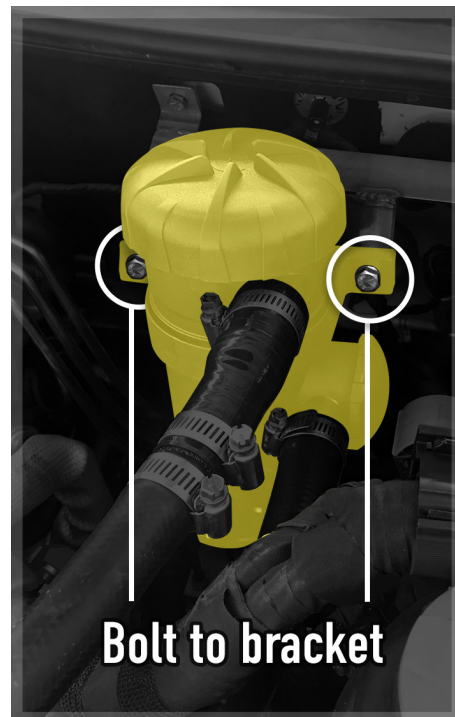


Step 6 / Img 5:

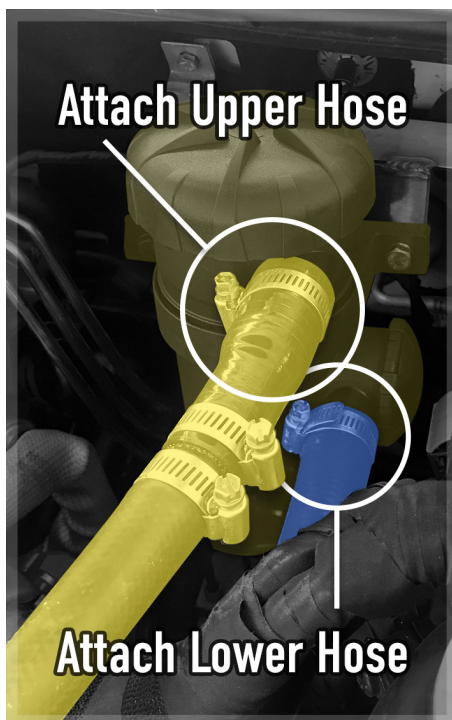

Step 7 / Img 6:



Step 8 / Img 7:

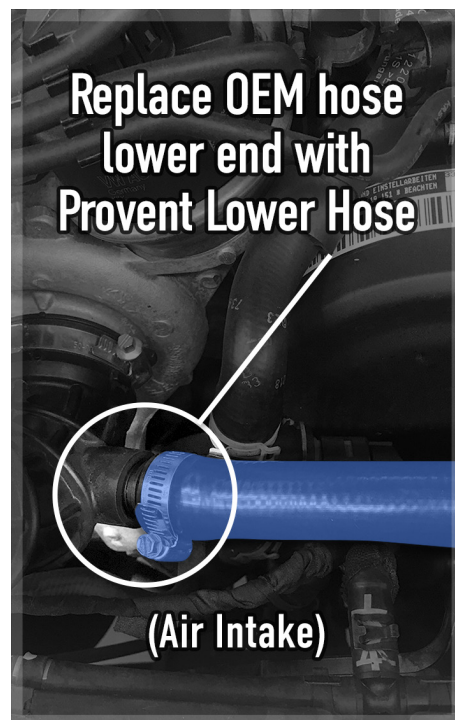

Step 9 / Img 8: